



ASSEMBLY MANUAL

MSWH01 PRO tower speaker stand white
MSBL01 PRO tower speaker stand black



NOTE:

Please assemble your product on soft surface to avoid scratches and damages on lacquer.


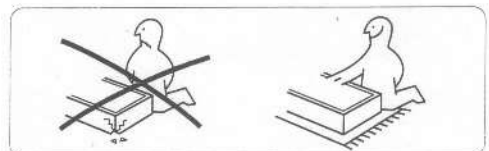
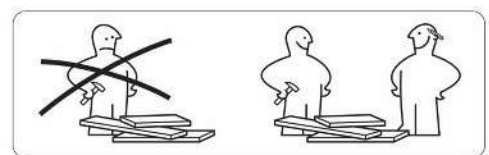


Thank you for making StudioDesk your desk of choice!

Before beginning assembly of your stand, let's get familiar with the parts you have received in your package. Please match the corresponding numbers on this page with the drawings.



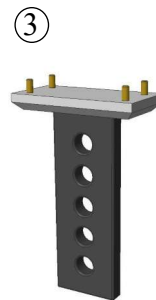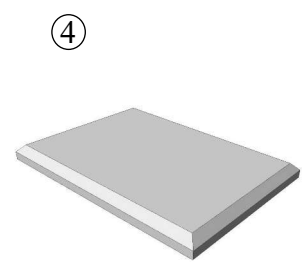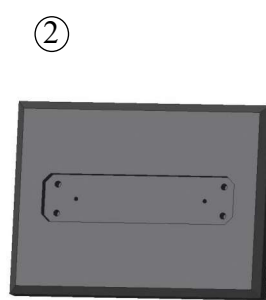


Wooden parts

1. Body
2. Base
3. Neck
4. Top shelf



Hardware


Tools needed (Not included)

<p>⑨ M6 Screw 2 pcs</p> 	<p>⑩ Lock Fi 30</p> 
<p>⑪ Desk tips 4 pcs</p> 	<p>⑫ Wooden Dowels 8 pcs</p> 
<p>⑬ Washer 2 pcs</p> 	




1 Step One

Insert dowels (12) into the holes as shown in the illustration. Use a rubber hammer if needed.

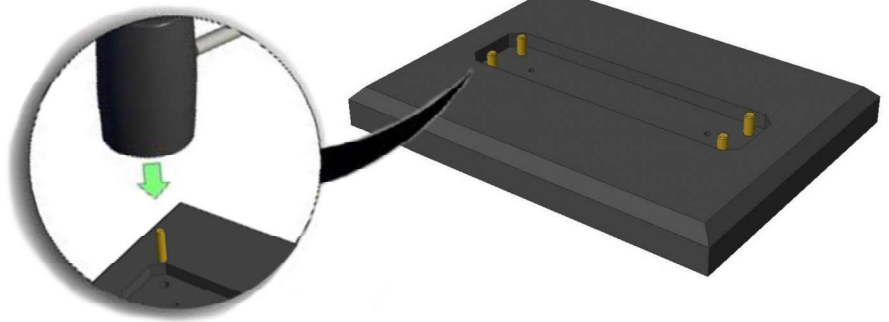

11


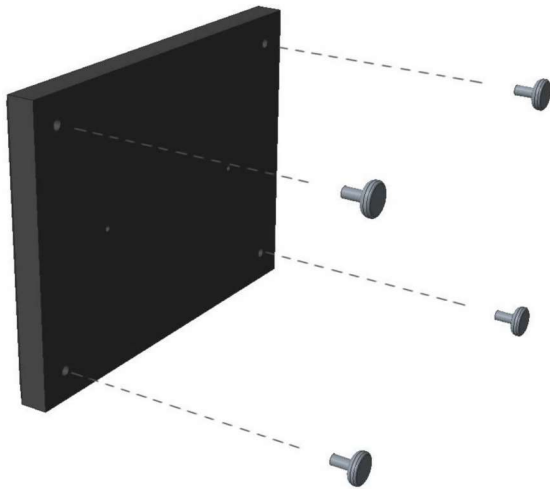


2 Step Two

Install tips to the base by screwing them in predefined place.


3 Step Three

Place body part to the base as shown on the illustration on the right.

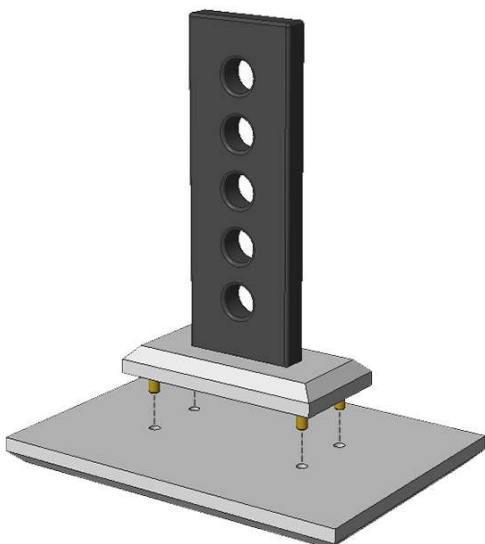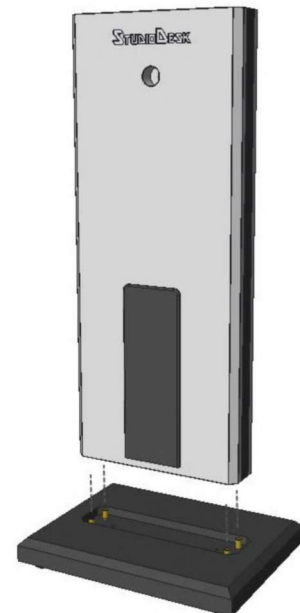

4 Step Four

Place neck part (3) and speaker shelf (4) on corresponding dowels and press it down until it comes to the place firmly.

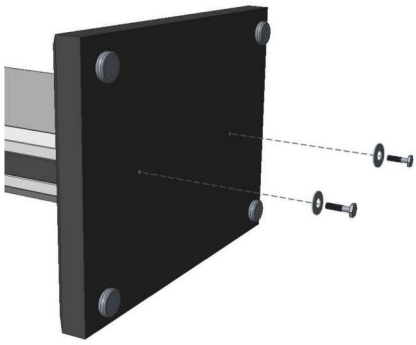

5 Step Five


Once dowels are in place and body sit tight to the leg, use M6 screws and washers to fix base to the body.



Step Six


7 Step Seven

Adjust desired height of the shelf and lock it with the metal lock. Lock should freely be pushed through body and neck until is in same level with the body surface from the both sides.

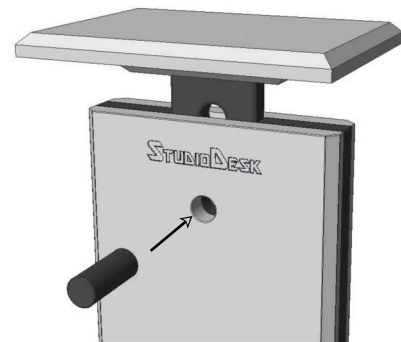

8 Step Eight

Fasten screws on the back to finish your speaker stand.

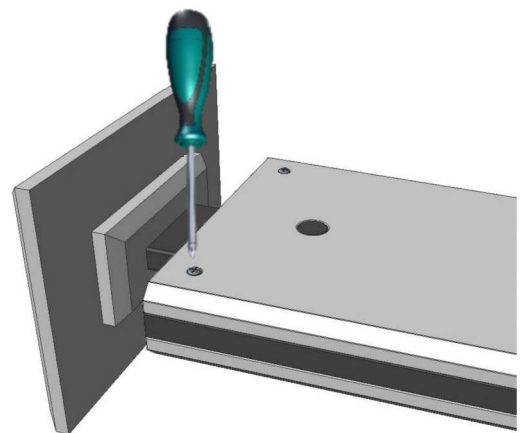

NOTE: Maximum safe load per speaker stand is 15 kg.